

## How to clean the Glasswasher

- Before emptying the Glasswasher ensure the drain pipe is in the sink (next to the Glasswasher) and the filter is fitted correctly in its place.
- At the end of the evening to release the water, press the button second from the left (with the arrow pointing down).
- When the water is draining it will display 'CLE'
- Once fully drained, Unscrew the washer arm and remove the filter then rinse out in the sink
- Clean the inside and outside with HOT & SOAPY WATER (get washing up liquid from the kitchen and use the kettle in there, DO NOT USE THE COFFEE MACHINE FOR HOT WATER) thoroughly, make sure to clean any small gaps which can collect dirt and take out any chunks of fruit left. Do not forget to clean under the door handle and down the side as this is often forgotten
- Once thoroughly clean, do one final rinse to remove any excess water by pressing the release water button again
- Once cleaned, go over with blue roll to make sure everything is dry (if the dishwasher is left with water inside it will stop cleaning properly)
- Finally turn off the dishwasher.

- NO CERAMIC IN THE GLASSWASHER (ONLY GLASSES)
- NO CUTLERY (INCLUDING COFFEE AND DESSERT SPOONS)
- RINSE OUT LIME, MINT AND SUGAR BEFORE PUTTING IN THE DISHWASHER
- DO NOT USE COFFEE MACHINE TO GET HOT WATER FOR CLEANING.

Quiz on Glasswasher Cleaning:

1. Preparation Steps: **What should be ensured before emptying the Glasswasher to maintain proper drainage?**
  - a) Check the filter colour
  - b) Ensure the drain pipe is in the sink and the filter is fitted correctly
  - c) Leave the drain pipe hanging
  - d) Skip preparation steps
2. Water Release Process: **How is the water released from the Glasswasher at the end of the evening?**
  - a) Pull a lever under the machine
  - b) Press the third button from the left
  - c) Press the second button from the left with the arrow pointing down
  - d) No need to release water
3. Draining Confirmation: **What will be displayed on the Glasswasher when the water is draining?**
  - a) 'DRN'
  - b) 'CLE'
  - c) 'WET'
  - d) 'DRA'
4. Cleaning Tools: **What should be used to clean the inside and outside of the Glasswasher thoroughly?**
  - a) Cold water
  - b) Hot and soapy water
  - c) Glass cleaner spray
  - d) Disinfectant wipes
5. Gap Cleaning: **Why is it important to clean small gaps on the Glasswasher?**
  - a) Aesthetic purposes only
  - b) No impact on cleanliness
  - c) To prevent dirt build-up
  - d) Skip cleaning gaps
6. Final Rinse: **When should a final rinse be done after cleaning the Glasswasher?**
  - a) Before draining the water
  - b) After removing the filter
  - c) After cleaning the inside and outside
  - d) No need for a final rinse
7. Drying Procedure: **Why is it essential to go over with blue roll after cleaning the Glasswasher?**
  - a) Aesthetic purposes only
  - b) To remove excess water and ensure proper cleaning
  - c) To add a fresh scent
  - d) To check for damages
8. Shutdown Process: **What should be done finally to the Glasswasher after completing the cleaning process?**
  - a) Unplug the Glasswasher
  - b) Turn off the dishwasher
  - c) Press the release water button again
  - d) Leave it running overnight